


MOSTER 185 Plus

User manual

release V2/2025

valid for MY25 version

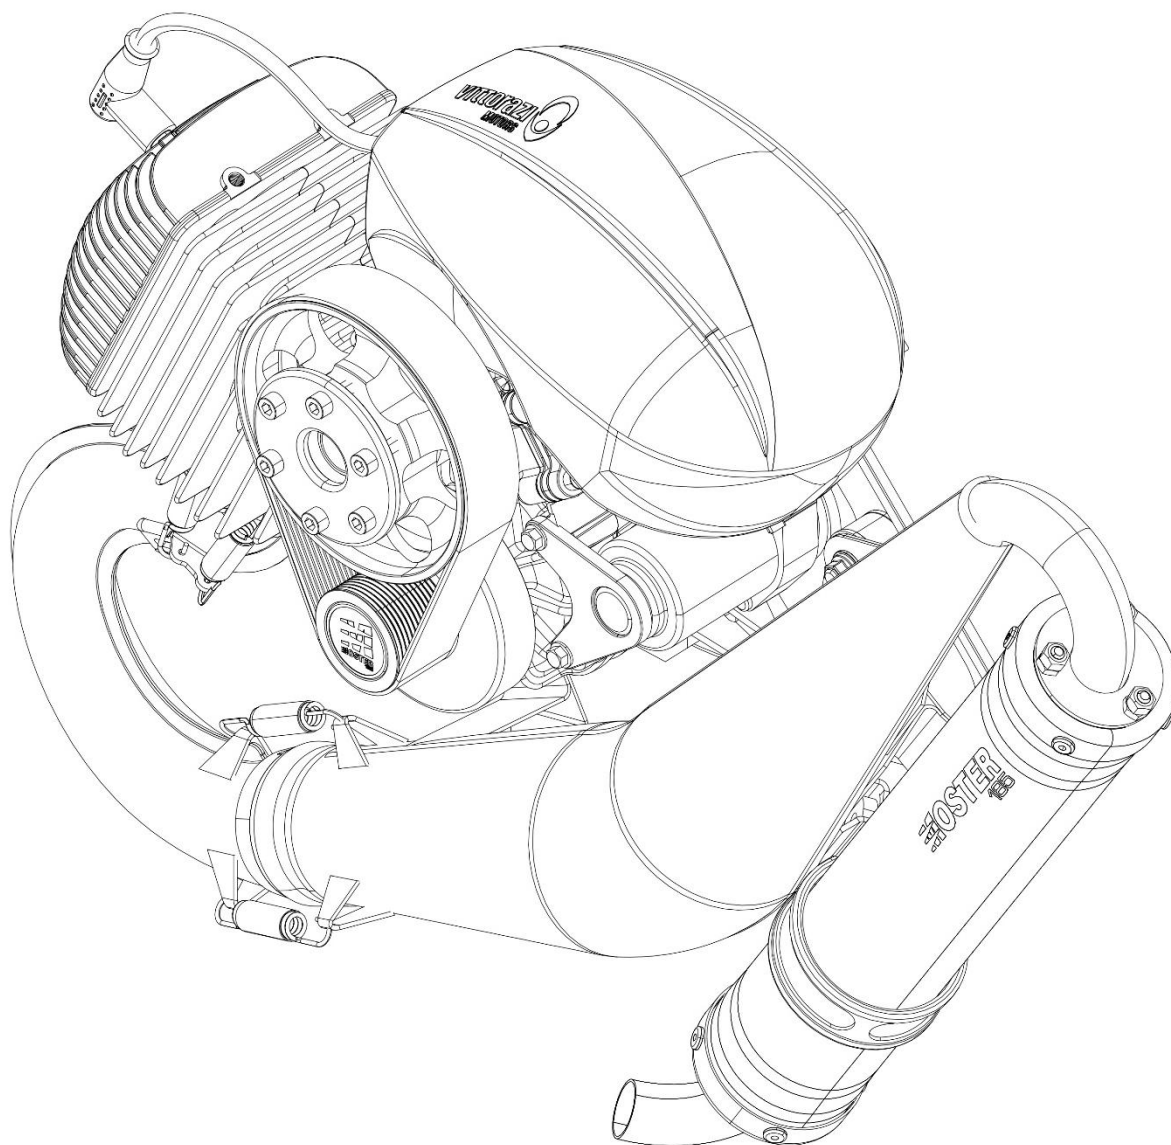

Contents

1	Introduction	4
2	Be careful! Read it completely	6
3	Moster 185: What is it?	9
	3.1 Engine versions identification	9
	3.2 Engine serial number	10
	3.3 Technical data	11
4	How to use it?	13
	4.1 Propeller assembling	13
	4.2 Fuel	18
	4.3 Start and stop	20
	4.4 Engine warm up	22
	4.5 Break-in procedure	23
	4.6 Belt tensioning	26
5	Safety first, check it	27
	5.1 Maintenance schedule	27
	5.2 Tightening values	31
	5.3 Carburettor setting	33
	5.4 Pre-flight checklist	35
	5.5 Spare parts	36
6	Warranty	37
	6.1 Warranty limits	37
	6.2 Warranty procedure	37
	6.3 Warranty coverage	38
	6.4 Contacts	40

1 Introduction

Congratulations and thanks for choosing a Vittorazi Motors engine.

The User Manual is part of the engine and must be preserved and attached to the engine if the engine is transferred to a new user. The purpose of this manual is to provide all the necessary information to the user in order to enable a proper use of the engine, carried out autonomously and in total security. The User Manual includes: technical descriptions of the operating modes, scheduled maintenance table and reference values; suggestions and safety measures to which the user is subjected are also included.

All the components of Vittorazi Motors are checked and tested in a process of industrial quality control before the assembling. Then by sampling the complete motors are checked to assure the functionality of all the parts through a complete test of twenty minutes on the bench. Note that the reliability, performance and durability of the engine also depend on proper use of the engine during time. Vittorazi Motors is always improving its engines and reserves the right to change in any moment and without notice, drawings, specifications, components and details of the models in production without any obligation towards the user.

In case you need further explanations, you can contact the authorized dealer of your country. Please include in the request, the six-digit serial number that identifies the motor (read 3.2 "Engine serial number") and a photo of the item in question.

Also take into account the availability of Illustrated Parts Catalogue (IPC), manual updates, service bulletins, FAQs, other documents in our official website. The video tutorials are available on the Vittorazi Motors official YouTube channel. Below the links.

Find the nearest dealer

www.vittorazi.com/en/dealers/



IPC, manuals, bulletins, newsletter, warranties, FAQ

<https://www.vittorazi.com/en/services/>



Vittorazi Official YouTube channel: video and free tutorials available

<https://www.youtube.com/user/VITTORAZIMOTORS>



Reading tips:

Attention, danger, risk

Any situation or condition which may result in a serious danger



Recommendation, warning, important advice



2 Be careful! Read it completely



To fly in total safety, you must read the following recommendations:

- This engine is not certified. This engine does not fulfil airworthiness regulations. The products are dedicated to non-certified aircraft and flying as a recreational or sporting activity.
- Final-user must be aware that the engine can stop, break or shut down at any time. Such an event may require an immediate and forced landing in inadequate, congested or impervious areas, with the possibility in the end of causing the death of the pilot or other persons involved.
- The aircraft equipped with this engine must be conducted in full compliance with rules and regulations in force relating to the activity of leisure and sport aviation, with regard to the country in which the operations are carried out.
- Vittorazi Motors and its distributors decline any direct or indirect responsibility related to this kind of activity. By using a new engine, the owner agrees that these terms and conditions have been accepted at the time of purchase of the product.
- The engine is not covered by any liability insurance. The use of the engine automatically determines the assumption of all risks and personal liability for personal injury or damage to third parties resulting from the activity.
- Improper use of the products or improper technical service (in relation to the specifications contained in the user, installation and maintenance manual) will hold harmless the company from any liability for any damage due to the malfunctioning and immediately void the warranty of the product. So, do not use the motor if it has not been properly maintained or if it has not been used correctly over time.
- Vittorazi does not assume any responsibility for those engines that are used with parts that are not original, not approved, modified or that have suffered an improper use. Use of spare parts not original and not recognized by Vittorazi, can make the engine dangerous and will void the warranty.
- Unauthorized modifications to the motor, to the reduction, to the propeller can invalidate the warranty of the motor and can compromise the reliability of the aircraft and its safety. In case it is necessary to intervene, we invite you to contact an authorized dealer Vittorazi.
- Some geographical areas, due to particular weather conditions such as pressure, temperature and humidity can affect the performance of the engine. Before taking off, test the engine on the ground and make sure it does not behave abnormally.
- Always start the engine on a flat and clean surface, without stones or sand. During all phases in which the engine is kept running near the ground (such as heating, take off, landing) it is necessary to maintain a safe distance from the engine. A good safety distance is 100 meters in every direction.



The following engine speed limits must be respected to avoid engine failures, to keep the warranty valid and to have a correct maintenance scheduling according to the Vittorazi program:

- Do not keep the engine at full revs for more than 60 seconds.
- Do not keep revs higher than 7.000 RPM during long cruising flights or long climbs. The average power delivered by the engine during a flight should remain below the indicated threshold. Contact the aircraft manufacturer for further clarification.




The temperature limit of CHT is:

- If measured with CHT under spark plug sensor (ACC023/ACC024): 250 °C.
- If measured with CHT MY25 dedicated sensor (ACC029): 200 °C.

This sensor ensures a more accurate measurement of the cylinder head temperature and is subject to less interference from the spark plug.

Do not persist above this temperature threshold, engine overheating and irreversible damage could occur.

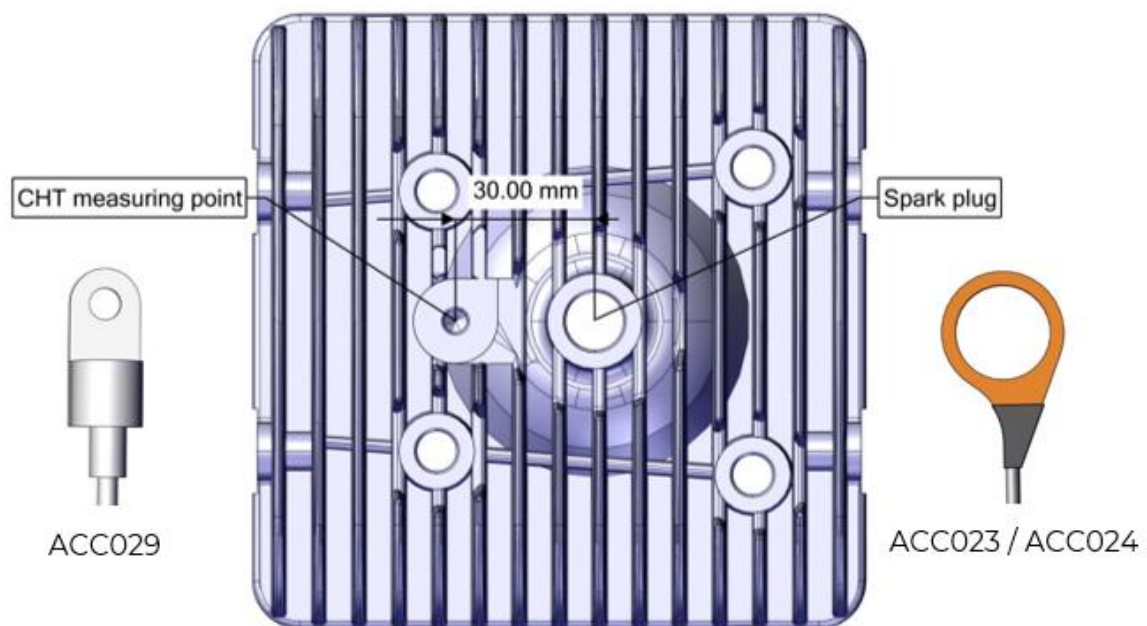




The temperature limit of EGT varies depending on the engine speed, the measuring position and the probe used for measurement, please refer to the EGT graphs on page 12. Do not persist above this temperature thresholds, engine overheating and irreversible damage could occur.

The MY25 exhaust manifold is equipped with a different position for the EGT sensor than previous models. This new position, combined with the new MY25 EGT sensor (ACC030), allows a more accurate measurement of the exhaust gas temperature.

The installation of the MY22 sensor (ACC025/ACC026) in the MY25 position is not allowed as it leads to obstruction of the exhaust gas flow due to the larger diameter of the sensor.

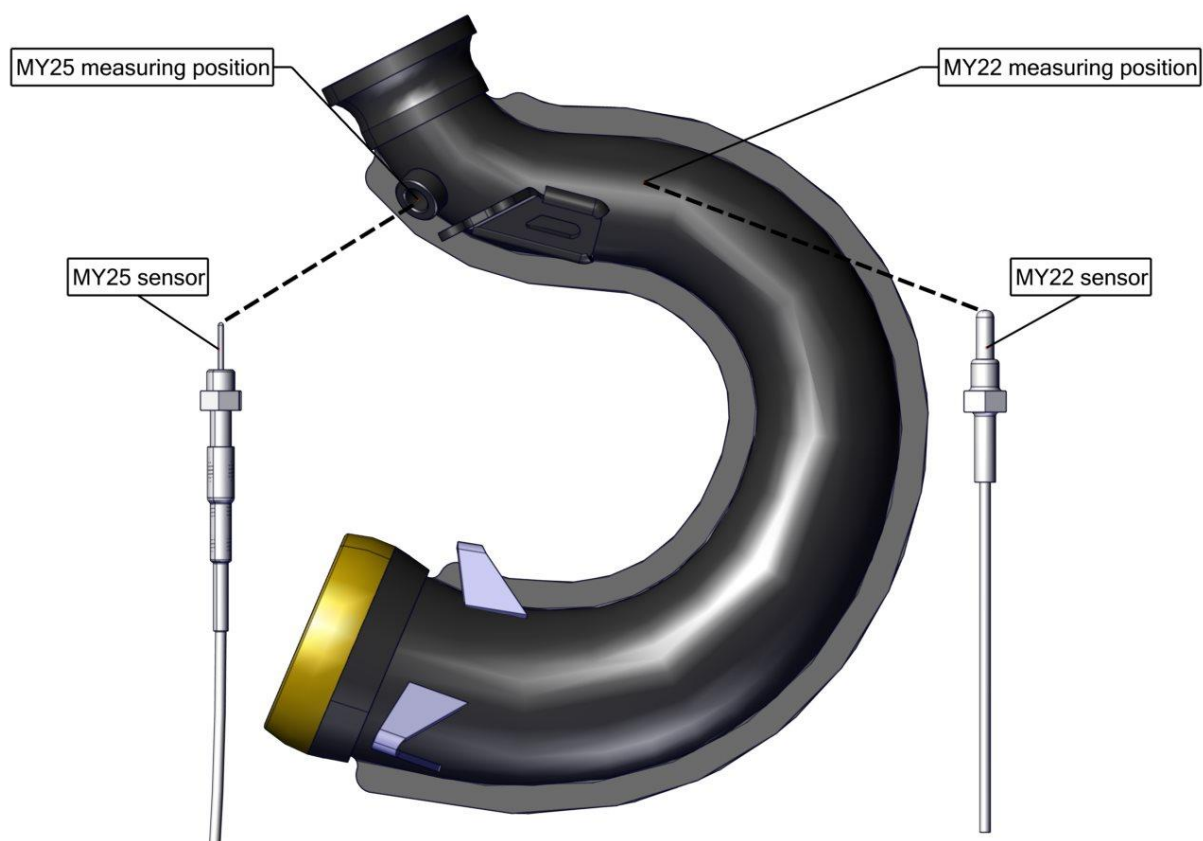

3 Moster 185: What is it?

Moster 185 is a single cylinder, two-stroke piston engine, air-cooled and fuelled with a mixture of gasoline and oil.

Power is transmitted from the crankshaft to the propeller shaft through a reduction ratio with poly V-belt system. The air inlet system consists of an airbox and a filter. Mixture of gasoline and oil is introduced in the cylinder through a diaphragm carburettor system. The carburettor has been calibrated before delivery in combination with this engine.

3.1 Engine versions identification

Moster 185 engine versions can be equipped with Manual or Dual starter (Dual: electric and manual starter).


Moster 185 model has two different reduction ratios: 1/2,68 and 1/2,87. On the rear part of the larger pulley is engraved a number representing the diameter in millimeters.

The number 128 corresponds to the reduction 1/2,68; the number 130 corresponds to the reduction 1/2,87. The reduction of 1/2,68 is the most common one and it is used for propellers from diameter 115 up to 130 cms. The 1/2,87 reduction is recommended for propellers with larger diameters from 125 up to 140 cms.

The 1/2,87 reduction produces less prop revs (for the same max engine RPM) and could offers less noise when combined with the right aerodynamic profile. The two reduction ratios in combination with the same aerodynamic profile, just different for pitch, produce very similar static thrust.

3.2 Engine serial number

The serial code of your engine is located under the carburettor system.

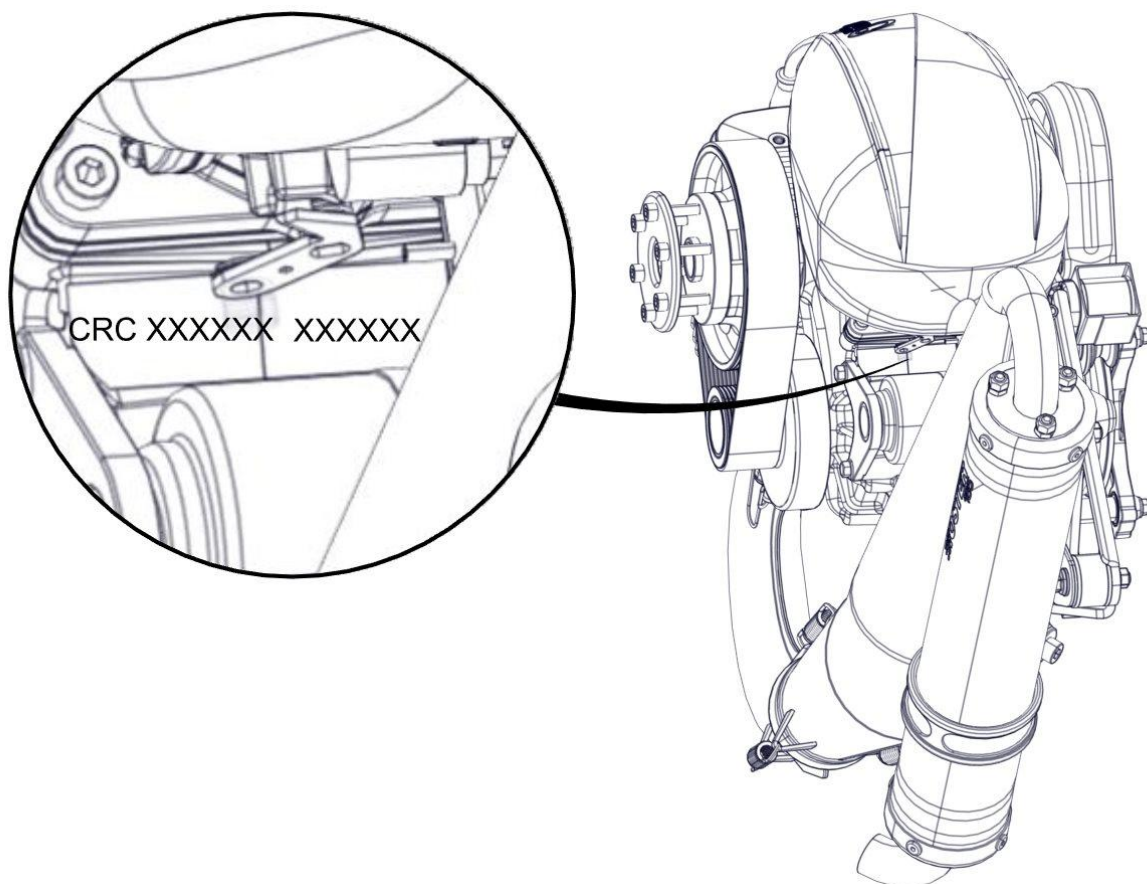


3.3 Technical data


	Moster 185 Plus MY25
Cycle	2 strokes
Stroke	54 mms
Displacement	184,7 cc
Bore	Ø 66 mms
Power	25 HP at 7.800 RPM
Cylinder	Single cylinder in aluminum; electroplated with hard coating Nikasil® technology
Piston	Casting piston, diamond profile, Molybdenum Disulphide (MOS2) coating on the piston skirt, 2 rings chromed
Air intake	Airbox silencer Diaphragm carburettor Reed valve intake
Cooling system	Air cooled, flow extraction from propeller
Starter	Manual: 3S (Soft Starter System) Dual: Electric Starter + 3S (Soft Starter System)
Transmission	Poly V-belt system with centrifugal clutch
Reduction	1/2,68 - 1/2,87
Ignition	Single Spark
Spark plug	NGK BR9ES
Max. EGT (Exhaust Gas Temperature)	See EGT graphs on page 11 (measured at 100 mm from the piston).
Max. CHT (Cylinder Head Temperature)	<ul style="list-style-type: none"> • 250 °C measured under the spark plug. • 200 °C measured at 30 mm from the spark plug with CHT MY25 Vittorazi dedicated sensor. (type K thermocouple, see installation manual for further information)
Maximum RPM	8.400–8.600 RPM
Engine idle	2.000-2.200 RPM
Static thrust	78 kgs prop. 130 cms at 8.500 RPM (2 blades Vittorazi Approved Prop) 75 kgs prop. 125 cms at 8.500 RPM (2 blades Vittorazi Approved Prop)
Exhaust pipe	Tuned exhaust system, ceramic powder coating Double joint system, double rib reinforcement system “Db-killer” chamber and silencer pipe in carbon fibre
Propeller rotation	Counter-clockwise
Fuel	Unleaded gasoline with 2,0 % synthetic oil (Motul710) Unleaded gasoline with 1,5 % synthetic oil (Motul800)
Fuel consumption	3,0 litres/hour, at 30 kgs of static thrust, prop. 130 cms at 5.200 RPM (2 blades Vittorazi Approved Prop)
Weight	14,4 kgs Manual 15,7 kgs Dual

Example curves of performance follow (data are taken at temperature, pressure and relative humidity shown in the graph). Propeller used is an approved Helix propeller, 125 cms diameter, 2 blades.


Thrust [kg] @ 15,7 °C, 87 % RH, 1017 mbar,
125 cms propeller, 2 blades

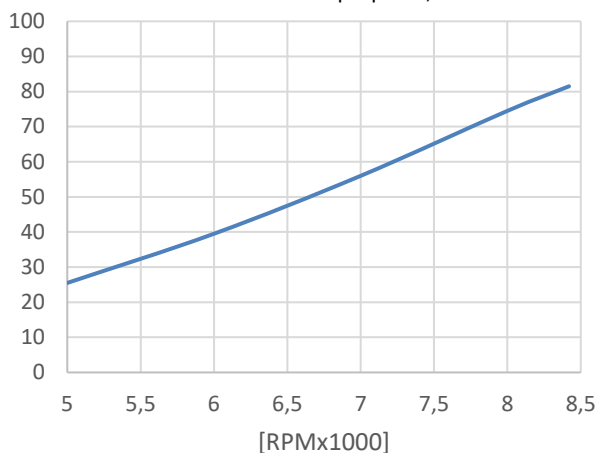

Fuel consumption [l/h]

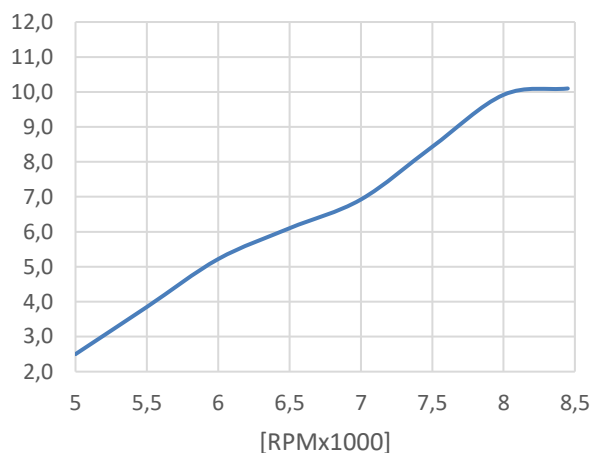


CHT [°C] - MY25 sensor (ACC029)

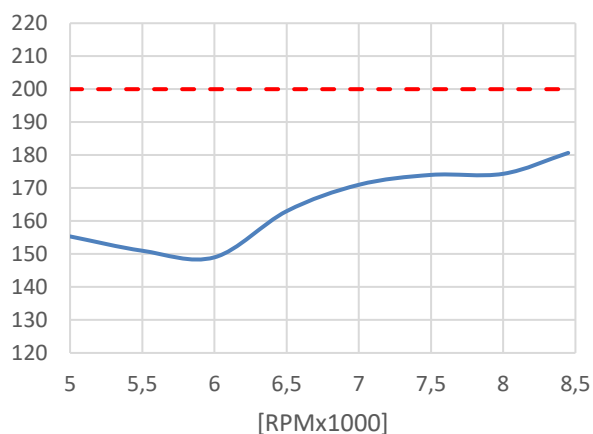


— CHT - MY25 sensor - - - CHT MAX - MY25 sensor

**CHT [°C] - Under sparkplug sensor
(ACC023/ACC024)**

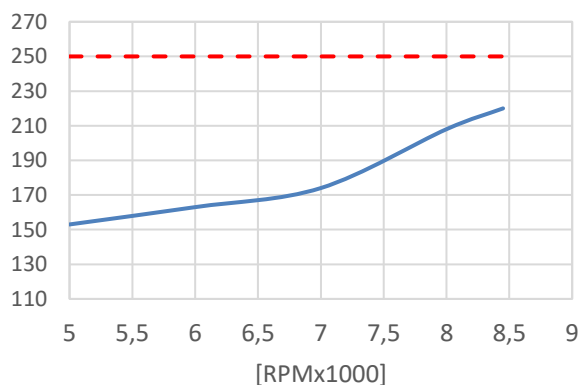


— CHT - MY22 sensor - - - CHT MAX - MY22 sensor

EGT [°C] - MY25 sensor (ACC030)

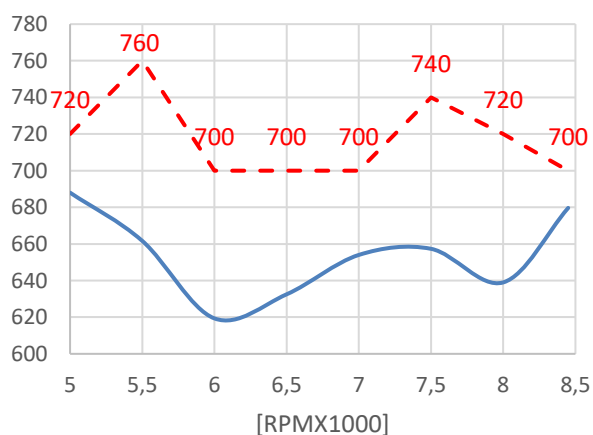

— EGT - MY25 sensor - - - EGT MAX - MY25 sensor

**EGT [°C] - MY22 sensor and position
(ACC025/ACC026)**

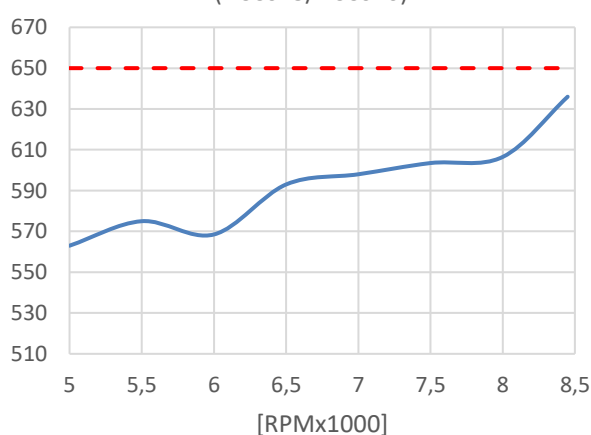


— EGT - MY22 sensor - - - EGT MAX - MY22 sensor


4 How to use it?

4.1 Propeller assembling

Considering the rear view, the propeller rotation is counter-clockwise. As first operation, couple the two blades in the bayonet recess as shown, then add the screws and the flange. Lastly, place the bottom of the propeller on the reduction hub and tighten the screws progressively until they reach the stop.

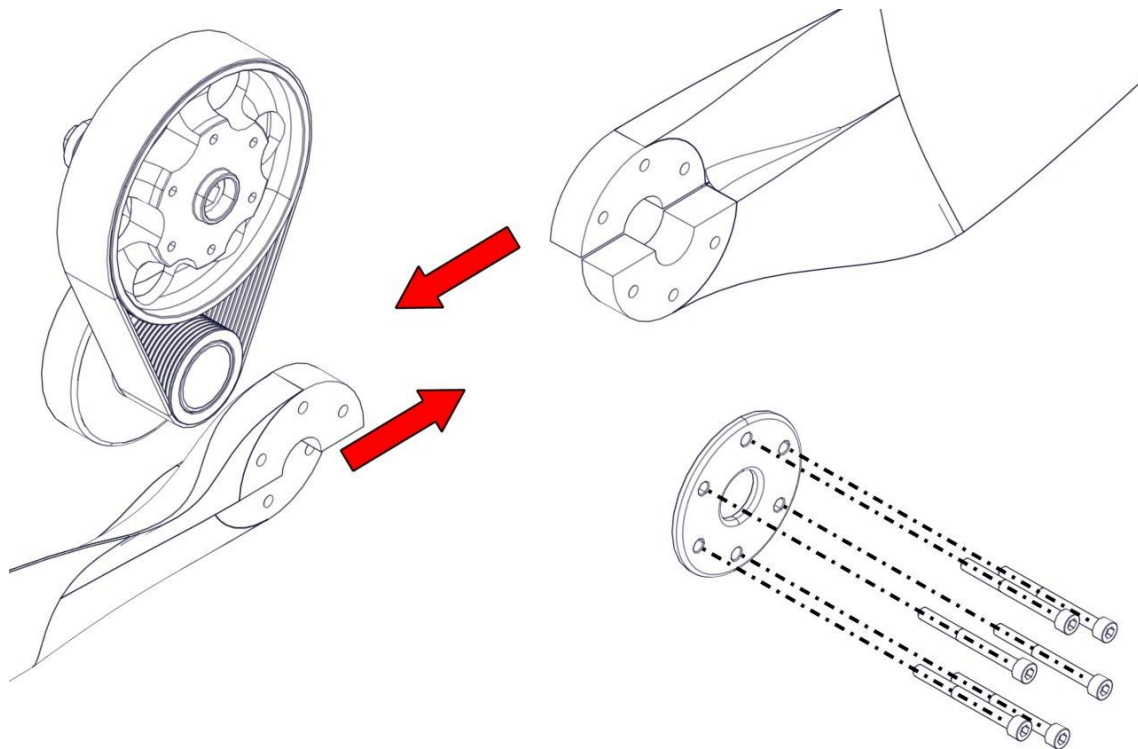

Fast acceleration propeller approved from Vittorazi, does not require a spacer between the hub and the propeller.

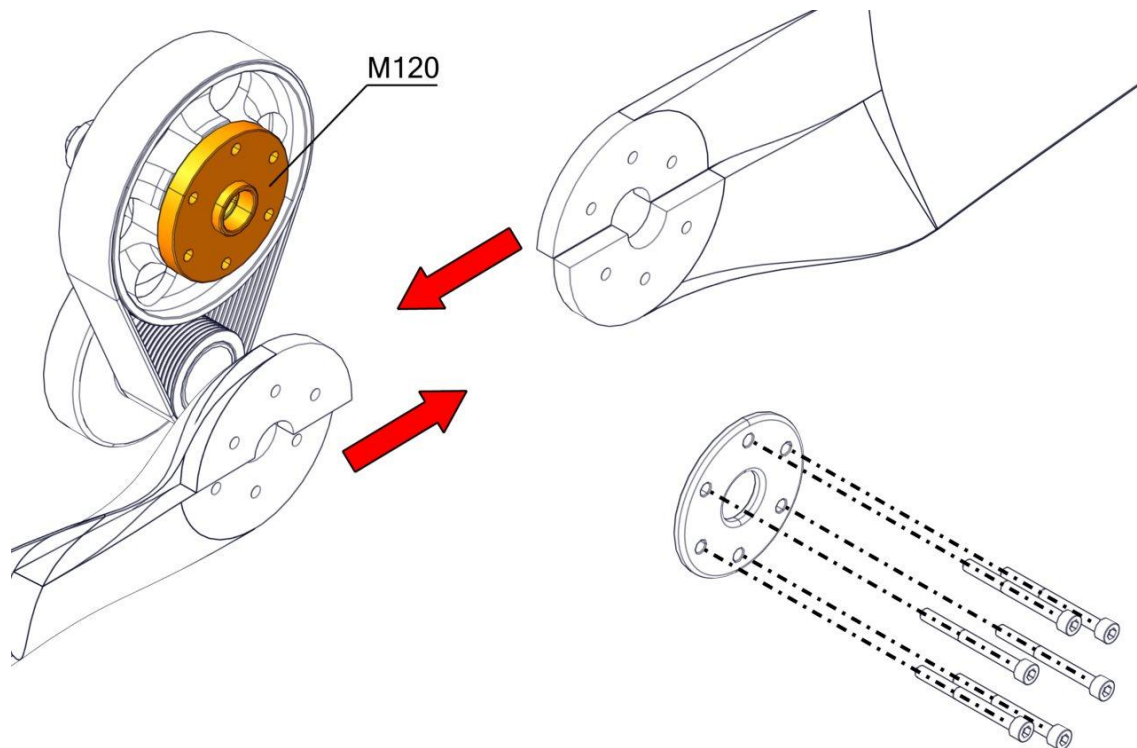

The extra-cooling profile propeller approved from Vittorazi, needs a spacer between the hub and the propeller. The only spacer authorized for this motor is the one designed and produced by Vittorazi (M120 code in the Illustrated Parts Catalogue). Spacers made with wrong measures or geometries, non-compliant materials, make the engine dangerous and void the warranty.



Propeller screws tightening values:

- Carbon-fibre propeller: **10-12 Nm** on each screw M6.

Ask an authorized dealer or the instructor, if you are not sure about the propeller assembling. **It is very important to check the tightening of the propeller screws before take-off and after landing.**

Propeller approved Moster185 Plus / Red. 2,68

Manufacture	Size / Code	Red. Ratio	Material / Blades	Spacer M120
Helix	H30F 1,15m L-NML-11-2	2,68	Carb. Fiber / 2	Yes
Helix	H30F 1,15m L-NML-12-2	2,68	Carb. Fiber / 2	Yes
Helix	H30F 1,20m L-NMM-09-2	2,68	Carb. Fiber / 2	Yes
Helix	H30F 1,25m L-NMM-07-2	2,68	Carb. Fiber / 2	Yes
Helix	H30F 1,25m L-NMM-08-2	2,68	Carb. Fiber / 2	Yes
Helix	H30F 1,25m L-NMJ-04-3	2,68	Carb. Fiber / 3	Yes
Helix	H30F 1,30m L-NMM-06-2	2,68	Carb. Fiber / 2	Yes
Vittorazi	VM MO185-125-2,68-9-2	2,68	Carb. Fiber / 2	No
Vittorazi	VM MO185-130-2,68-8-2	2,68	Carb. Fiber / 2	No
Vittorazi	VM MO185-130-2,68-5-3	2,68	Carb. Fiber / 3	No
E-Props	P701F-125	2,68	Carb. Fiber / 2	No
E-Props	P701F-130	2,68	Carb. Fiber / 2	No

Propeller approved Moster185 Plus / Red. 2,87

Manufacture	Size / Code	Red. Ratio	Material / Blades	Spacer M120
Helix	H30F 1,15m L-NML-10-3	2,87	Carb. Fiber / 3	Yes
Helix	H30F 1,20m L-NML-10-2	2,87	Carb. Fiber / 2	Yes
Helix	H30F 1,25m L-NML-08-2	2,87	Carb. Fiber / 2	Yes
Helix	H30F 1,30m L-NMM-08-2	2,87	Carb. Fiber / 2	Yes
Helix	H30F 1,30m L-NMJ-04-3	2,87	Carb. Fiber / 3	Yes
Helix	H30F 1,40m L-NMM-05-2	2,87	Carb. Fiber / 2	Yes
Vittorazi	VM MO185-125-2,87-8-2	2,87	Carb. Fiber / 2	No
Vittorazi	VM MO185-130-2,87-7-2	2,87	Carb. Fiber / 2	No
Vittorazi	VM MO185-130-2,87-7-3	2,87	Carb. Fiber / 3	No
Vittorazi	VM MO185-140-2,87-6-2	2,87	Carb. Fiber / 2	No
E-Props	G74L-125	2,87	Carb. Fiber / 2	No
E-Props	G74L-130	2,87	Carb. Fiber / 2	No



Be sure that the screws are suitable to the propeller in use: the thread of the screws is inserted in the hub, for at least 12 mms for carbon propellers.



The use of a propeller not approved from Vittorazi can give rise to serious anomalies and immediately voids the warranty (see also the warranty chapters).

For Vittorazi the propeller is an integral part of the engine and should not be considered an extra part of the engine. The company has decided to invest in research and study of high-tech solutions, to have an ideal combination engine-propeller in many flight conditions. All approved propellers are designed in collaboration with Vittorazi engineers, with the aim of giving maximum performance and safety. Let's see some features guaranteed in the approved propellers:

- The adequate operation in optimal RPM-Range of engine and propellers.
- The best thrust during take-off and critical flight conditions, optimizing the energy transfer in a disturbed airflow.
- The best fuel consumption in all flight conditions, thanks to the most efficient profile and angle of attack.
- The optimization of the dynamic torque effects and static torque effect, through a lightweight structure and designing low resistance profiles.
- Avoiding resonant frequencies through optimized carbon fibre structure of the propeller and avoiding annoying vibrations along the entire RPM range.
- The correct balancing of the propeller by static and dynamical procedure, combined with a safe and precise mounting by CNC machined holes.
- The reduction of noise thanks to the best profiles and the tip speed below 0,65 Mach.
- Additional design features, as the extra cooling profile to increase the ventilation of the cylinder head temperature (CHT) till the best working temperatures.
- Engine safety and reliability are given by the long endurance tests (200 hours) performed in extreme conditions with the approved propellers, to check if there are any critical issues before the production.



The engine warranty ends when the propeller, the engine, the aircraft has an accident.

After a propeller has broken, the engine is no longer safe. The engine must be completely checked by an authorized centre in every part of the system before resuming flight activity. This is also necessary for the rest of the aircraft. The statistics lead to the inspection of the following engine components:

- Reduction drive unit (propeller hub, bearings, reduction cases, main propeller shaft gears, screws, others).
- Engine carter case, engine rubber mountings, main screws.
- Exhaust system and silencer unit.
- Airbox system (airbox, sleeve, safety devices).
- More.

In case of damage of the propeller, replace it immediately with a propeller guaranteed by Vittorazi Motors. Replace in any case all screws of the propeller.

4.2 Fuel

Moster 185 plus engine requires a mixture of gasoline and oil to operate. Choose an open, ventilated, clean location away from dust, sand, grass and any foreign bodies that may come into contact with the mixture. If possible while refuelling, filter the mixture (recommended Mr. funnel fuel filter). Make sure that the fuel tank, filter and funnel, are always perfectly clean. The Moster 185 plus is a high performance engine engineered to deliver optimal power output and fuel efficiency under well-defined operating parameters. Strict adherence to the fuel and oil specifications outlined in this manual is essential to ensure proper engine performance, safety, and warranty compliance.



Gasoline is extremely flammable and explosive. Never do the fuel-oil mixture preparation and engine refueling operations when the engine is running or near possible ignition sources.



Vittorazi engines are approved with fuel that complies with the EU regulation UNI EN 228. This fuel has a minimum Research Octane Number (RON) of 95 and contains a maximum volume percentage of ethanol of 5%. The company has tested the wear limits of the mechanical parts with this fuel and the maintenance program is calibrated on this basis. Ethanol concentrations beyond the specified threshold can cause severe degradation of fuel system components, chemical contamination, accelerated mechanical wear, compromised engine performance and an increased risk of failure. RONs less than 95 increase the risk of self-ignition and detonation. When the available petrol doesn't meet the required standards, we recommend the use of AVGAS 100LL (Aviation Gasoline, 100 RON, Low Lead) in order to prevent any engine damage. Continuous use of AVGAS 100LL does not affect the engine warranty. The use of fuels that doesn't meet the required standards poses a high risk to the user and the engine and leads to the voiding of the product warranty.



The key risks and consequences of using non-approved fuels and oils include:

- Component degradation: ethanol aggressively deteriorates rubber and plastic components within the fuel system, including fuel lines, seals, and filters. This degradation significantly increases the risk of pipe cracking and loss of tightness throughout the line, consequently leading to:
 1. pressure drops that compromise engine performance and operation.
 2. the entry of air bubbles within the system that can cause the engine to shut down during operation.
 3. fuel leaks creating a fire hazard.
- Fuel system contamination: use of fuels with ethanol content exceeding the 5% volume limit, combined with ethanol's hygroscopic nature, promotes moisture absorption, formation of aqueous emulsions, and accelerates harmful chemical reactions within the fuel system. When combined with non-approved oils, this leads to deposits, sludge, and foam accumulation in the fuel line till the carburettor nozzle. These contaminants cause partial or total blockages, reduce fuel flow, disrupt flow, and promote microbial growth ("fuel fungus"), especially in humid conditions or

during extended storage. Resulting fuel system degradation compromises engine stability, reduces power output and, in extreme cases, engine failure.

- Performance deterioration: excess ethanol disrupts the optimal air-to-fuel mixture, resulting in lean combustion. This could lead to engine overheating, reduced power output, erratic operation and, in extreme cases, engine failure. Consistently using fuel without ethanol or with the correct ethanol content is essential to maintaining stable air-to-fuel mixture and reliable engine performance.



The approved oils for the Moster 185 plus are **Motul710** or **Motul800**, following extensive approval testing over years.

- The **Motul710** is suggested for infrequent use, cross and discovery flights, with moderate and short climbs to max revolutions.
- The **Motul800** is suggested for frequent use, tandem, freestyle, competition, sportive and extreme use.

In case the above-mentioned oils are not available, make sure to use oils with the following characteristics:

Type	2 stroke, 100% synthetic Ester oil
Density at 20 °c (ISO 12185)	0,88 ÷ 0,926 g/cm ³
Viscosity at 40 °c (ASTM D445)	70,0 ÷ 152,0 mm ² /s
Viscosity at 100 °c (ASTM D445)	11,0 ÷ 18,7 mm ² /s
Viscosity index (ASTM D2270)	140,0 ÷ 148,0
Flash point (ASTM D92)	154,0 ÷ 274,0 °C



It is advisable to use mixtures prepared at the time or very few days before; a mixture prepared 2-4 weeks in advance and left in a tank can separate (oil and gasoline), losing its lubricating characteristics, even when mixed before use, and increases the amount of water absorbed by the mixture due to the hygroscopic nature of ethanol.



Wrong oil-fuel mixture, non-compliant oils, wrong fuel or dirty fuel, other reasons already mentioned above, lead to voiding of the product warranty (see also the warranty paragraphs).


4.3 Start and stop



To test your aircraft on the ground, you have to be very careful. Carry out a checklist before starting the engine (chapter 5). Brake the aircraft in such a way that the thrust created by the rotation of the propeller does not cause any harm to you or other people near you. Shout CLEAR PROP! You can now start the engine. Be ready to turn off the engine at any time for safety reasons.



Filling the fuel line. Before starting the engine, the fuel line must be filled. To do this, activate two elements simultaneously: the fuel line valve on the carburettor and pressurise the fuel tank to make sure fuel reaches the carburettor. Keeping the fuel line valve open for longer than 1 second while the line is pressurised, would bring too much fuel to the engine, thus flooding it.

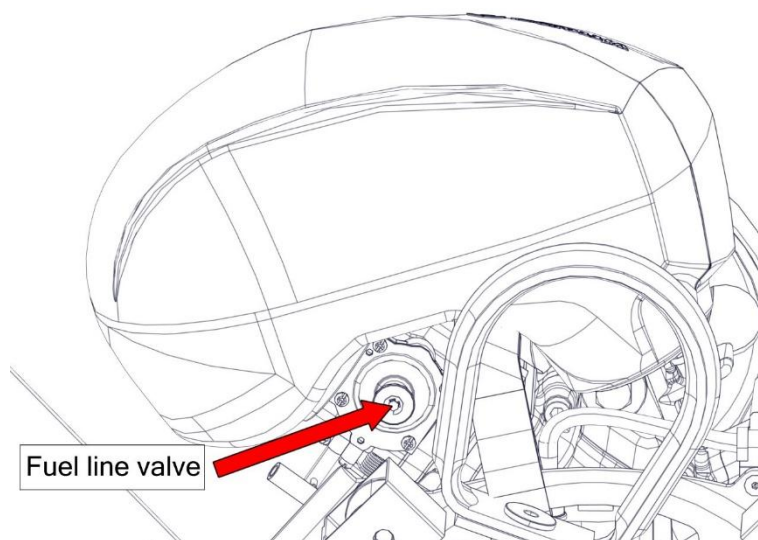



Cold engine starting. Throttle position at idle or less than 20 % open.

Warm engine starting. Throttle position at idle. It is not necessary to refill the fuel line. A simple touch of the fuel line valve (without pressurising) is sufficient to eliminate any bubbles created during the stopping period.

Starting the engine when it is flooded. Full throttle opening. Extremely dangerous condition when performing this operation. Thrust may be violent and instantaneous in the event a sudden start.

The engine has a recoil starter with 3S technology (Soft Starter System). To correctly perform the starting procedure with the 3S system we suggest you to see the tutorials available on our channel. You will see how to grip the handle, how to perform a progressive pull on the handle, what to do to avoid damage.

<https://www.youtube.com/user/VITTORAZIMOTORS>



Electrical system warnings.

Disconnect battery after flight:

- It prevents voltage regulator leakage current to drain battery charge.
- It prevents accidental start of the engine.

Disconnect battery from the electrical system before recharging:

- Always use a battery charger suitable for the chosen battery to avoid any risk of explosion due to improper charging.
- When voltage regulator is used without battery it will fail.

4.4 Engine warm up

Warm up the engine before use.

30 sec	Gently accelerate to stabilize engine and carburettor
2-6 min	Heat the engine at constant RPM (5.500 RPM) up to 100 °C CHT. If CHT sensor is not installed heat the engine for about: <ul style="list-style-type: none">• 2-3 min with ambient air temperature above 15 °C;• 5-6 min with ambient air temperature below 15 °C.
15-20 sec	Keep FULL throttle
NOW the engine is ready to fly	



Be careful. The thrust generated by the propeller can be sudden and must be ensured with the right procedure when warming up the engine.

4.5 Break-in procedure

A carefully executed break-in phase, following the next instructions, improves the life of the engine and its performance. The presence of experienced personnel during the running-in phase is recommended, also to carry out the necessary checks at the end of the period.

The engine must be used carefully in the first hours of break-in (15 litres) and fuel mixture must be prepared as indicated in the table. The first time the engine is started, it must be warmed up on the ground for a few minutes, paying utmost attention to noises or abnormal behaviour. We recommend to complete the break-in on the same day.

Break-in	Moster 185 (all versions)
From 1 st to 15 th litre of fuel	Oil 2,5 % or 40:1 Motul710 Oil 2,0 % or 50:1 Motul800
After the 15 th litre of fuel	Oil 2,0 % or 50:1 Motul710 Oil 1,5 % or 66:1 Motul800

Ground Break-in	<p> Tools: chronometer and RPM counter; Test location: on the ground; Duration: about 2 hours in total; Test cycle: operating cycle of 15 working minutes followed by 15 minutes of cooling, to be repeated 4 times. </p> <table border="1" data-bbox="512 349 1158 1111"> <thead> <tr> <th>RPM</th><th>Time</th></tr> </thead> <tbody> <tr> <td>4.000</td><td>4 min</td></tr> <tr> <td>Idle (2.000-2.200)</td><td>1 min</td></tr> <tr> <td>5.000</td><td>3 min</td></tr> <tr> <td>Idle (2.000-2.200)</td><td>1 min</td></tr> <tr> <td>6.000</td><td>2 min</td></tr> <tr> <td>Idle (2.000-2.200)</td><td>1 min</td></tr> <tr> <td>7.000</td><td>1 min</td></tr> <tr> <td>Idle (2.000-2.200)</td><td>1 min</td></tr> <tr> <td>8.000</td><td>30 sec</td></tr> <tr> <td>Off</td><td>15 min cooling</td></tr> </tbody> </table> <p> Final checks: carry out the checklist shown in the next chart before proceeding to the flight phase. </p>	RPM	Time	4.000	4 min	Idle (2.000-2.200)	1 min	5.000	3 min	Idle (2.000-2.200)	1 min	6.000	2 min	Idle (2.000-2.200)	1 min	7.000	1 min	Idle (2.000-2.200)	1 min	8.000	30 sec	Off	15 min cooling
RPM	Time																						
4.000	4 min																						
Idle (2.000-2.200)	1 min																						
5.000	3 min																						
Idle (2.000-2.200)	1 min																						
6.000	2 min																						
Idle (2.000-2.200)	1 min																						
7.000	1 min																						
Idle (2.000-2.200)	1 min																						
8.000	30 sec																						
Off	15 min cooling																						
Flight Break-in	<p> Test location: on flight; Duration: up to 15 litres (also include the fuel previously consumed on the ground break-in); Test cycle: each flight duration is up to 30 minutes. </p> <p>Do not keep the engine at max RPM for more than 30 seconds or do not keep constant RPM for a long time. Gradual accelerations and releases are recommended.</p>																						
Regular use	<p>Use engine with mixture of oil 2,0 % Motul710 or 1,5 % Motul800.</p>																						

At the end of the ground break-in perform the following checks:

Engine screws and nuts tightening;
Propeller screws tightening;
Engine idle;
Carburation from spark plug colour;
Rubber mountings;
Airbox fixing;
Pull starter system / Electric starter;
Exhaust bushing joints (correct sliding, no leaks);
Belt tensioning;
All installed components (engine fixing, electrical system, fuel line system, instrumentation, other parts).



Carry out the above operations in accordance with the installation, use and maintenance manual and under the supervision of authorized personnel.

4.6 Belt tensioning



The belt tensioning must be checked when the engine is cold.

To check belt tensioning, pinch the belt and measure the frequency oscillation with a frequency tension tester (or mobile app).

If the values are within the following frequency range: 430-450 Hz, the belt is properly tensioned. Otherwise follow the directions in the maintenance manual to perform the works safely.

First installation	Retensioning
500-520 Hz	430-450 Hz



Check the belt tensioning and the condition of the grooves each 25 hours.
Replace the belt every 100 hours.



The values of tensioning and duration refer to the original belt Vittorazi. The use of not original belt or the application of wrong values of tensioning, can cause serious damages to the transmission and to the crankshaft, besides to void the warranty of the whole motor.



When installing a new belt, refer to the chart values for the first tensioning (500-520 Hz), then carry out a tensioning check after 2 hours of operation (430-450 Hz).

5 Safety first, check it

5.1 Maintenance schedule

Refer to the following maintenance indicated time schedule to fly in total safety. Work on the engine is only allowed to be carried out by experienced mechanic and authorized dealers. These are prescribed checks at certain interval times to avoid engine problems through preventative maintenance.

Caption:



Cleaning



Check



Measuring




















Replacement


























Lubricate with WD-40

Note:













- 1) or after a year
- 2) rope, spring, hooks or a new pull starter system
- 3) springs
- 4) each time the component is disassembled
- 5) head, exhaust port, decompressor hole
- 6) tensioning

Flight hours	Before each flight	Every 10 h	Every 25 h	Every 50 h	Every 100 h	Every 150 h	Every 200 h
Pre-flight checklist							
Screws and nuts (tightening)							
Carburation from spark plug colour							
Spark plug							
Spark plug connector							
Carburettor							
Carburettor membranes					 1)		
Airbox Snaplock							
Airbox			 				
Airbox safety strap							
Airbox sponge and sleeve			 		 1)		
Reed valve petals							
Pull starter system					 2)		

The table follows in the next page

Flight hours	Before each flight	Every 10 h	Every 25 h	Every 50 h	Every 100 h	Every 150 h	Every 200 h
Electric starter							
Kit exhaust bushing (1 st joint)	 			 			
Exhaust bushing (2 nd joint)	 			  3)			
Exhaust manifold with springs							
Soundproofing material silencer							
Silencer rubber						 1)	
Gaskets (cylinder, carburettor, reed valve, exhaust, silencer)					 4)		
Piston					 		
Piston roller bearing							
Head and cylinder					 5) 		
O-ring head					 4)		

The table follows in the next page

Flight hours	Before each flight	Every 10 h	Every 25 h	Every 50 h	Every 100 h	Every 150 h	Every 200 h
Rubber mountings (engine, exhaust)						 1)	
Oil seal carter case							
Crankshaft bearings							
Crankshaft							
Belt			 6)				
Reduction bearings							
Centrifugal clutch							
Clutch bell							
CHT sensor (Optional)							
EGT sensor (Optional)							

5.2 Tightening values

Component	Torque value	Thread size	Lubricant/ sealant	Specification for titanium bolts
Engine carter screws	10 Nm	M6x35/40		Paste Wurth 0893 921 501
Carter support screws	20 Nm	M8x16		Paste Wurth 0893 921 500
Cylinder studs	20 Nm	M8		Paste Wurth 0893 921 500
Cylinder head nuts	16 Nm	M8	Copper paste	Copper paste
Spark plug	25 Nm	M14x1,25		
Exhaust studs	25 Nm	M8	Loxal 83-55/ Loctite 270	Loxal 83-55/ Loctite 270
Exhaust nuts	32 Nm	M8	Copper paste	Copper paste
Exhaust support plate's nuts	18 Nm	M8		
Rubber mounting nuts (M021b, M151c)	18 Nm	M8		
Rubber mounting nuts (M151a)	15 Nm	M8		
Carburettor flange screws	8 Nm	M5x25		Paste Wurth 0893 921 501
Carburettor screws	6 Nm	M6x60	Loxal 55-03/ Loctite 243	Loxal 55-03/ Loctite 243
Pulse line inlet (brass)	hand tightening	M6	Loxal 53-14/ Loctite 542	Loxal 53-14/ Loctite 542

The table follows in the next page

Snaplock airbox pivot	10 Nm	M6	Loxal 55-03/ Loctite 243	Loxal 55-03/ Loctite 243
Airbox fixing clamp	2,5 Nm	50-70 mm (clamp size)		
Flywheel nut	52 Nm	M10x1,25		
Electronic ignition coil bolts	hand tightening	M5x20		Paste Wurth 0893 921 501
Aluminium toothed pulley's screws	8 Nm	M5x20	Loxal 55-03/ Loctite 243	
Manual starter screw	10 Nm	M6x63	Loxal 24-18/ Loctite 222	Loxal 24-18/ Loctite 222
Starter central pin screw	17 Nm	M8x25	Loxal 83-55/ Loctite 270	Loxal 83-55/ Loctite 270
Eccentric rear screw	25 Nm	M8x16		
Eccentric side screw	12 Nm	M6x35		Paste Wurth 0893 921 502
Electric starter screw	10 Nm	M6x25		
Electric starter fixing plate's screw	10 Nm	M6x25		
Carbon propeller screws	10-12 Nm	M6		
CHT sensor	10 Nm	M6x10	Loxal 83-55/ Loctite 270	
EGT sensor	7Nm	M8x6	Interflon paste HT1200	



5.3 Carburettor setting

L and **H** adjustments of the carburettor screws in their standard positions ensure correct engine performance, optimal operating temperature and best lubrication of all parts. Carburation is correct if:

- The engine maintains a constant idle (2.000-2.200 RPM) and does not tend to turn off or flood.
- In rapid acceleration from low RPM, engine reacts immediately without power gaps or shutdown.
- At cruising RPM (approximately 5.500 RPM), engine provides a regular and smooth thrust.
- At max RPM (full throttle), thrust is constant and the RPM is between 8.400-8.600 RPM.

If the engine shows any of the problems listed above, it is necessary to check the carburation. Gently screw-in the L to the end of its rotation (DO NOT use force, there is risk of permanently damaging the carburettor) and re-open according to the following values.

Setting	Moster 185 Plus MY25
Screw L	12 minutes
Screw H	71 minutes (sealed for warranty purposes)
Idle	2.000-2.200 RPM

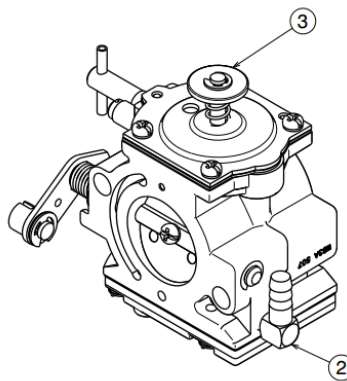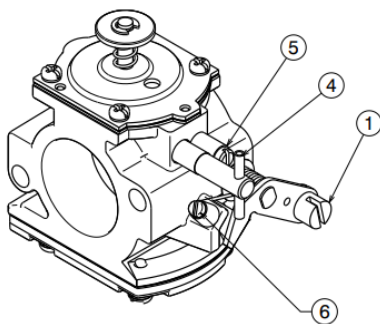


- 1 Throttle lever
- 2 Gasoline inlet
- 3 Fuel line valve
- 4 High speed screw
- 5 Low speed screw
- 6 Throttle adjustment



Screw H of the carburettor is sealed by Vittorazi Motors to ensure the safety of operation. Incorrect setting of screw H can result in serious damage. If the opening of the settings is lower than the table specifications, the mixture will be poor and there is the possibility of breaks, such as seizure, overheating, piston melting, early wear of the components. Wrong carburettor settings, or breakage of the H seal, lead to voiding of the product warranty (see also the warranty paragraphs).

A second check of the carburetion can be made verifying the colour of the spark plug electrode. A first control can be done, at the end of the of break-in period, in the following way:

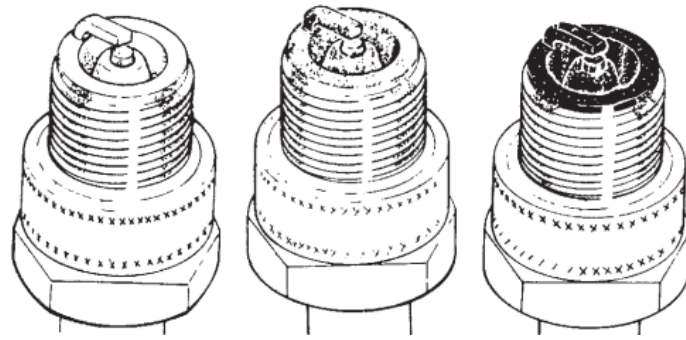

**Light Grey /
Grey**

**Brown /
Cappuccino**

**Black / Dark /
Wet**

Electrod colour	Carburetion quality
Light grey / Grey	The carburetion is poor, lean. It is important to find the cause immediately, with the help of an authorized dealer / instructor.
Brown / Cappuccino	Normal, Optimal, Correct.
Black / Dark / Wet	The carburetion is rich. Gently screw-in the L to the end of its rotation and re-open according to the prescribed values. Contact an authorized dealer if the problem persists after the change applied.

5.4 Pre-flight checklist

Check propeller screws tightening .
Visually check the engine integrity : rubber mountings, muffler, airbox fixing, belt, cylinder head and all the other components.
Visually check the fuel line, electric cables and components.
Verify that throttle joystick sliding is correct, in its upper and lower limits.
Fill the fuel line following the procedure.
ENGINE IS NOW READY TO START.
Place your aircraft in a safe position to start the engine .
Shout CLEAR PROP! Start the engine.
Complete the engine WARM UP procedure.
Check for abnormal vibrations or noise .
Check that Max RPM is between 8.400 and 8.600 .
Check that engine keeps the Max revs for at least 5 seconds .
Check the engine idle, so the RPMs are stable between 2.000 and 2.200 RPM .
Turn off the engine to check the correct operation of the killing switch button .
ENGINE IS NOW READY TO TAKE OFF.

5.5 Spare parts

Ask to a Vittorazi dealer for the spare-parts. If a dealer is not available in your area or country, you can contact the nearest Vittorazi dealer (or directly the factory).

The use of not original parts and parts not recognized by Vittorazi, can make the motor dangerous and this immediately voids the warranty. Vittorazi doesn't accept any warranty for those motor used with not original parts, parts not recognized, modified motors or those who have been used improperly.

You can download the Vittorazi Motors Illustrated Parts Catalogue (IPC) directly from the website. The manufacturer will ensure immediate availability of spare parts.

IPC, manuals, bulletins, newsletter, warranties, FAQ

<https://www.vittorazi.com/en/services/>



Find the nearest dealer

www.vittorazi.com/en/dealers/



Vittorazi Official YouTube channel: video and free tutorials available

<https://www.youtube.com/user/VITTORAZIMOTORS>



6 Warranty

On all the motors sold by Vittorazi Motors from January 1st 2022, will be applied the new warranty conditions indicated in this manual.

6.1 Warranty limits

This warranty remains in force for a period of 2 years / 150 hours of use, means that the engine is covered for 2 years from the date of purchase or 150 hours of use - whichever occurs first. To keep your warranty valid for up to 150 hours, you must follow a maintenance schedule as outlined in the manuals and record the service work in the following document (service booklet). An hour meter integrated in the aircraft is required, always working and well installed to the engine. This warranty does not cover repairs, replacement of components or provision of services after the warranty expiration date.

Any procedure of installation, maintenance and/or repair of the products must be carried out exclusively with the original Vittorazi Motors parts and tools specified by Vittorazi, in compliance with the specifications contained in the user, installation and/or maintenance manual of the products; to ensure maximum safety and performance of the products, the above-mentioned procedures will be carried out by mechanics with proven experience in the ultralight aviation or general aviation or with experience gained by Vittorazi Motors professional training courses. Failure to do so, will held harmless the company from any liability for any damage due to the malfunctioning and immediately void the warranty of the product.

6.2 Warranty procedure

Any warranty claim must be requested from the product owner to the authorized dealer within ten (10) days of discovering the anomaly. The owner has to show the copy of the "proof of purchase" of the product, such as the bill or commercial invoice of the engine or the entire aircraft, together with the "service booklet". Vittorazi Motors can request at its own discretion, the invoice of the original spare parts bought and/or the invoice of the service performed by mechanics with proven experience, as further proof of the accomplished maintenances.

The dealer has in charge the complete filling of the proper "Warranty Form" and the sending to the Vittorazi Motors headquarters for the acceptance. The dealer is the only official channel to activate a request of warranty: the requests received through direct mailing, social post, telephone contact, won't be taken in consideration from Vittorazi Motors. Once the request is accepted, the dealer will be the responsible to plan the inspection and the reparation of the product, as long as the motor is covered by the warranty. Vittorazi Motors undertakes to deliver the replacement parts under warranty to the head office of the dealer / aircraft manufacturer. All the shipping expenses that are necessary from the head office of the dealer to the address of the client, will be not in charge of Vittorazi Motors.

Vittorazi Motors may require to return the anomalous parts or components for evaluation prior or subsequent to the approval of any warranty. In this case the shipping costs will be on charge of Vittorazi Motors from the address of the client to the factory headquarter. All the parts replaced, both defective or non-compliant, during the interventions of warranty, will become property of Vittorazi Motors. The company can also require a proof of destruction of the broken parts instead of their return, at its own discretion.

6.3 Warranty coverage

This warranty covers engine damage caused by: components that are defective in form or material, design or assembly error from the factory. By using a new engine, the owner agrees that these terms and conditions have been accepted at the time of purchase of the product. Accordingly, under this warranty, the company's obligations shall be limited to repairing the defective component and/or replacing one or more components, or as necessary to restore full engine functionality.

Improper use of the products or improper technical service (in relation to the specifications contained in the user, installation and maintenance manual) **will held harmless exempt the company from any liability for any damage due to the malfunctioning and immediately void the warranty of the product.** Here are listed most of the reasons.

- improper use or mistreatment of the engine by the user, such as:
 - any neglect or omission of generic controls;
 - any lack of maintenance at the specified time intervals;
 - use of the engine already affected by any damage;
 - use of the engine with a non-approved propeller;
 - use of the engine with a damaged or unbalanced propeller;
 - use of the engine with a wrong combination propeller/reduction ratio;
 - use of wrong fuel, wrong mixture oils, wrong fuel/oil mixture percentage, fuel stored for excessive time;
 - use of inadequate fuel for presence of water, additives, impurities;
 - use of the engine with liquids, lubricants that are not compatible with the engine;
 - incorrect warm-up procedure;
 - incorrect break-in procedure;
 - other reasons described in the manuals.
- use of the engine that has exceeded any limit recommended by the engine manufacturer, e.g. max engine RPM, cylinder head temperature (CHT), exhaust gas temperature (EGT), fuel consumption;
- use of the engine for racing or any other competitive activity;
- use of non-original components Vittorazi Motors, non-compliant accessories, other items not approved for the engine;
- not authorized modification from original configuration of the product (e.g. the drilling of the exhaust manifold);
- any incorrect carburetor setting and/or a broken seal on the adjustment screw;
- improper technical service in relation to the specifications contained in the user, installation and maintenance of the engine;
- any incident affecting the engine and/or the propeller, or even a single component of the aircraft;
- missing or incorrect implementation of any service bulletin issued by the company;
- any incident involving the engine and/or the aircraft, related to fire, lightning strike, water landing, transport, storage and any other factor out of Vittorazi's control.

The following cases are not guaranteed under any circumstances:

- replacement of normal wear and tear or service items (such as spark plug, belt, membranes, gaskets, liquids and more);
- any failure or malfunction resulting from piston seizure, piston scuffing, and any damage resulting from lack of lubrication (including related damage to cylinder, head, crankshaft, bearings, etc.);
- any failure or malfunction due to ingestion of foreign objects (e.g., dirt inside or outside the product, corrosion, ingestion of water, ice, sand, other) or any other damage due to the operating environment;
- further maintenance interventions required by the client, besides those covered by the warranty.

The following are not covered by warranty or compensation:

- damage caused to persons/animals/things caused by general use of the engine;
- damage caused to persons/animals/things, caused by collision with any part detached from the engine;
- damage caused to the aircraft components and/or propeller, caused by collision with any part detached from the engine;
- recovery, shipping, telephone or rental costs of any kind, inconvenience or loss of time, or other consequential damages.

For any question about the warranty coverage, contact the authorized dealer, that can provide further information.

6.4 Contacts

For any questions, claims, doubts or problems with the operation of the engine, do not hesitate to contact us. We will always be ready to help you.

Check out our list of information channels and follow us constantly to stay updated.

Find the nearest dealer

www.vittorazi.com/en/dealers/



Vittorazi Newsletter: to receive exclusive information and obtain technical safety updates

<https://www.vittorazi.com/en/newsletter/>



Facebook official page: follow us and catch commercial promotions

<https://www.facebook.com/vittorazimotors/>



Facebook official group: support our initiatives and share your experiences with us

<https://www.facebook.com/groups/VittoraziMotorsSupportOnline/>



Service booklet

Owner's data

Name and last name

Address
(Street, City & Country)

E-mail address

Telephone number

Engine's data

Engine model

Engine serial number

CRC

Date of purchase

Dealer / Distributor / Seller

Hours

Operations

**Flight
hours**

Date

**Dealer
Signature
& Stamp**

25

Suggested
maintenance

50

**Mandatory
maintenance**

75

Suggested
maintenance

100

**Mandatory
maintenance**

125

Suggested
maintenance

150

**Warranty
expiry**

