P.A.P.



# PROPELLER QUICK-RELEASE HUB


user manual

# ELEMENTS INCLUDED

in the box



x1

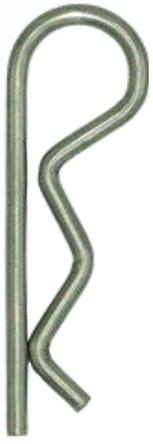

x1



x1



x6



x6



x1



x1



x1



x1

# We drill the propeller with

a 6.3mm drill bit

1



We align the drill bit with the propeller holes

2




We move the drill bit back and forth a couple of times

# Installation of the quick release

onthe pulley

1

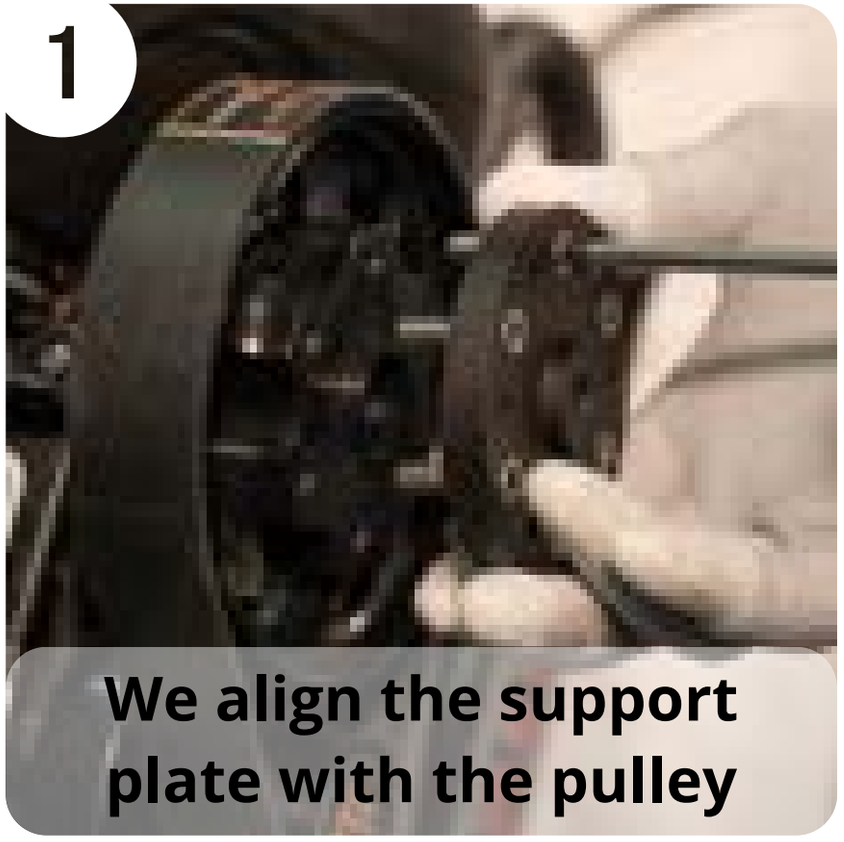

We align the support plate with the pulley

2



We insert the screws into their threads


3



We tighten the screws in a cross pattern to 10Nm

# **Installation of the front plate**
on the propeller

4

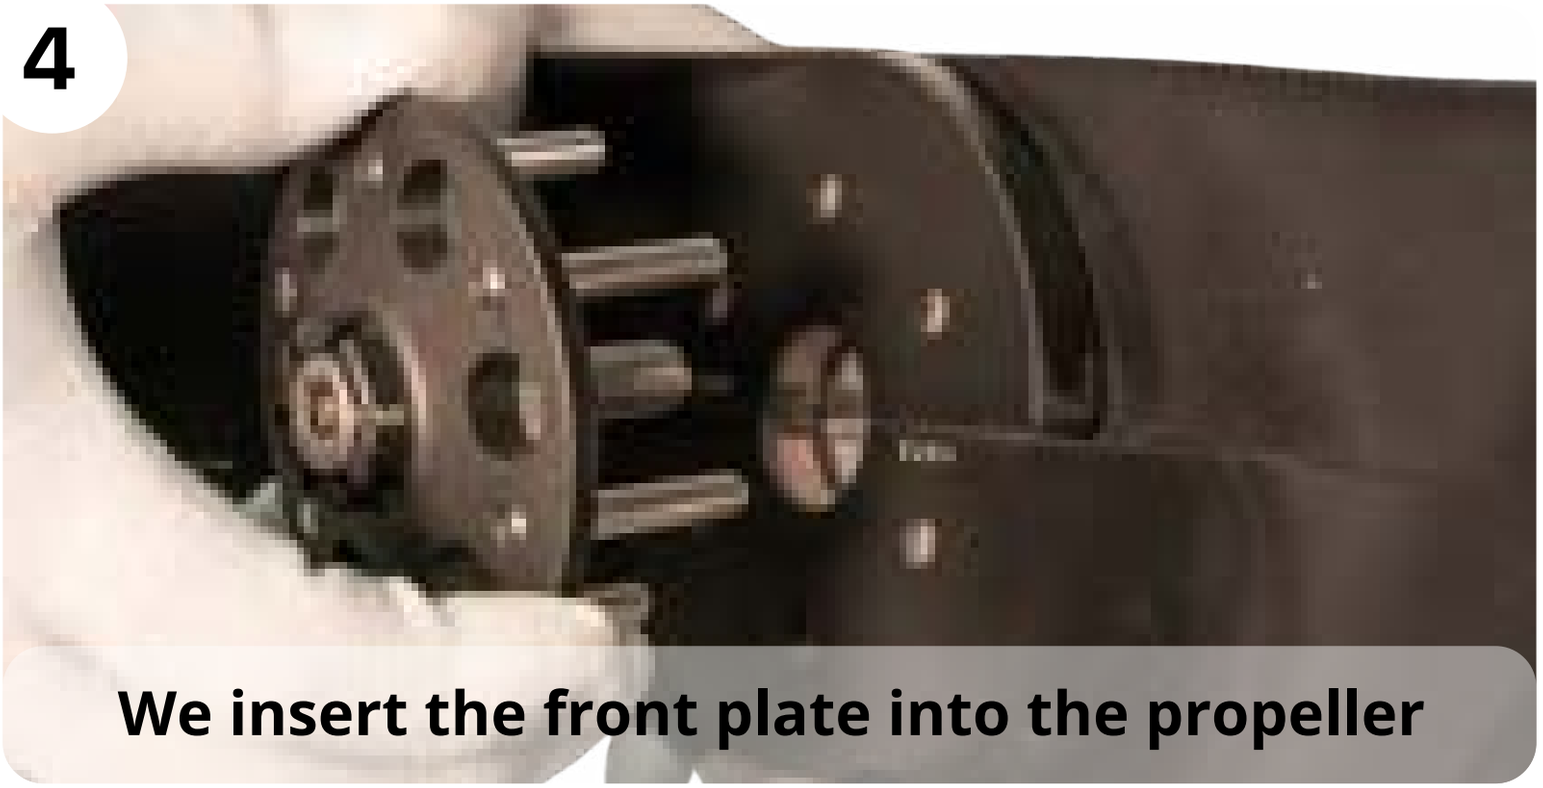

**We insert the front plate into the propeller**

5



**Using our thumbs as assistance**

6



**Make sure it has entered all the way to the end**

# Installation of the propeller

on the paramotor

7



We screw the central screw into the bracket

8



We tighten the central screw to 17Nm

9



We insert the safety pin





# P.A.P.TEAM

## FOLLOW US ON:

@papteamparamotors

PAP Team Paramotors

PAPTEAM Paramotors

**www.papteam.com**

**Propulsion Auxiliar Parapente, S.L.**
Urb. Bel-Air  Water Garden Calle la moraleja Local 1
29680 - Estepona
952 88 48 11 - info@papteam.com